




Type 2.5 mm



Type 1.25 mm

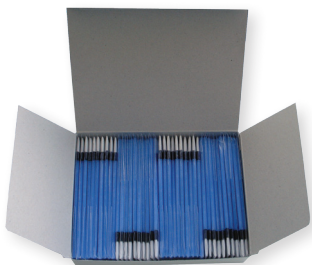

NOYES® Cletop Adapter Cleaning Sticks

Cletop (ACT) adapter cleaning sticks are an easy to use efficient means of cleaning fiber optic connectors in adapters and cleaning adapter alignment sleeves. Cletop sticks are available in sizes for most common commercial connectors (ST, SC, FC, LC, MU), military connectors, and LEMO connectors for video applications. When connectors need to be cleaned inside adapters, you can rely on the Cletop stick.


Features

- Easy to use and efficient. Delivers a consistently high level of cleaning performance.
- Easy to clean ferrule end-faces inside the plug-in fiber optic connectors and various adapters.
- Lightweight and safe to use. Compact and disposable.
- Suitable for cleaning inside adapters for dust control.

Ordering Information

DESCRIPTION	CONNECTORS	AFL NO.
ACT-01 — 2.5 mm Cletop Sticks (Box of 200)	FC, SC, ST, & D4	8500-10-0024MZ
ACT-02 — 1.25 mm Cletop Sticks (Box of 200)	LC & MU	8500-10-0022MZ
ACT-03 — 2.0 mm Cletop Sticks (Box of 200)	Military Termini.	8500-10-0023MZ
Double-ended 2.0/2. mm Cletop Sticks (Box of 100)	High definition television camera connectors such as LEMO.	8500-10-0030MZ
2.5mm Cletop Stick with Guide Sleeve (Box of 100)		8500-10-0031MZ

Recommended Cleaning Procedure for ACT Cleaning Sticks

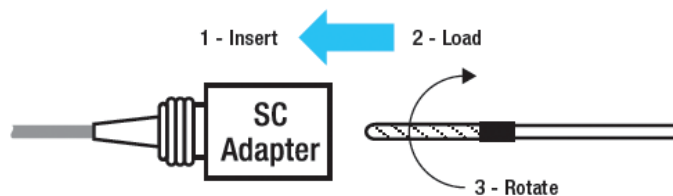

Procedure:

- 1. Insert:** Ensure that stick is held straight when inserting into sleeve.
- 2. Load:** Apply sufficient pressure (approx. 600-700 g) to ensure ferrule is a little depressed in sleeve.
- 3. Rotate:** Rotate stick clockwise 4-5 times, while ensuring direct contact with ferrule end-face is maintained.

Notes:

1. Number of possible wipes:
Maintenance (repair) ~1 use
Equipment construction: 4 uses (max.)
2. FCC2 Fluid will improve cleaning performance.